


Measurements:

The **AccuMASTER Digital Fraction 6" Caliper** can perform four different measurements.

- 1 External
- 2 Internal
- 3 Step
- 4 Depth

Functions:

- **Frac/Inch/mm** - Sets caliper's display for fractions, decimal inches or millimeters.
- **0** - Sets display to zero at any selected position of the caliper.
- **On** - Turns on power. The caliper defaults to a setting of 0.00.
- **Off** - Turns off power. The auto shut-off will automatically turn off power after 5 to 7 minutes of inactivity.

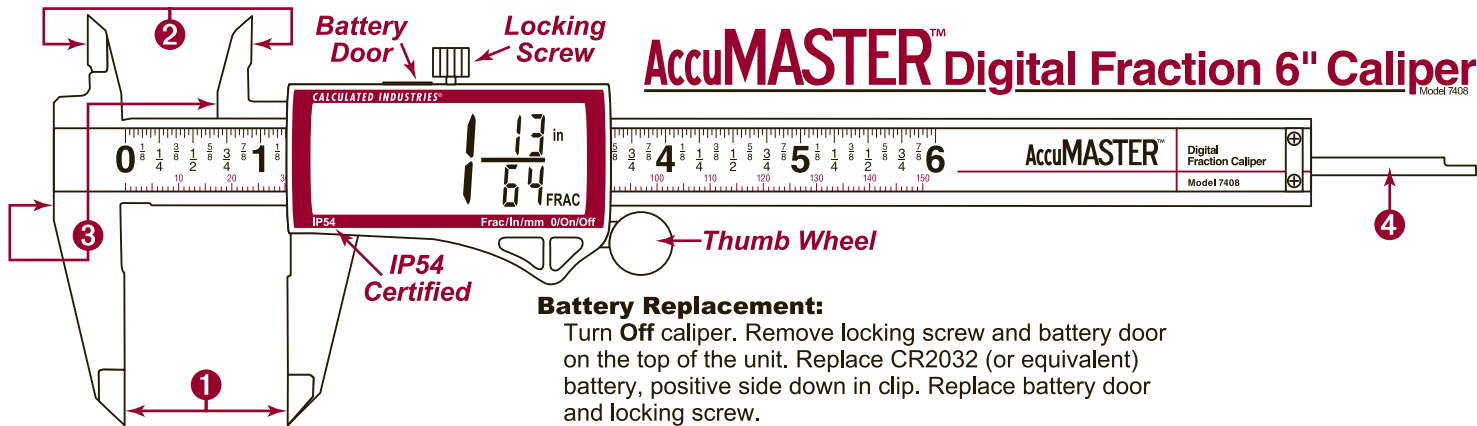

Battery Replacement:

Turn **Off** caliper. Remove locking screw and battery door on the top of the unit. Replace CR2032 (or equivalent) battery, positive side down in clip. Replace battery door and locking screw.

IP54 Certified:

- Splashing water, oil and dust-resistant

Visit **AccuMASTER.com**
to see our entire line of **AccuMASTER**
woodworking tools.

CALCULATED
INDUSTRIES

4840 Hytech Drive, Carson City, NV 89706 USA
1-775-885-4900 E-mail: info@calculated.com
calculated.com