User Manual

Vantage® Trimmer Models 12E, 15E, 18E

- For use in trimming paper, photographs, and thin cardboard, etc.
- 12" (12E), 15" (15E), 18" (18E) trimming lengths
- Automatic clamping system provides comfortable and safe trimming
- Scale in cm and inches with a ½" grid for easy sizing of material

Safety Instructions

- To avoid injuries, use the trimmer on a solid, level, and secure surface.
- Always secure the blade after use.
- Keep young children away from the trimmer.
- Do not touch the cutting blade with your fingers.

Usage

- The upper blade is fixed into place during non-operation. To release the upper blade gently push to the right approximately ½" and lift up.
- Place the material to be cut on the surface of the trimmer. With the use of the markings, size the material to the desired length or set the backstop to the correct position.
- Press the blade down slowly. The clamp will then automatically hold the material to be cut in place.
- After the cutting process is complete, lift the blade to release the clamp and take out the cut material. Secure the blade by slightly pushing to the right ½", dropping the blade down slightly and then pushing the handle slightly back to the left.

If you have any questions, please call a Customer Service Representative at (800) 995-1379.

Vantage Trimmer

Best used for trimming paper, cardstock & photographs

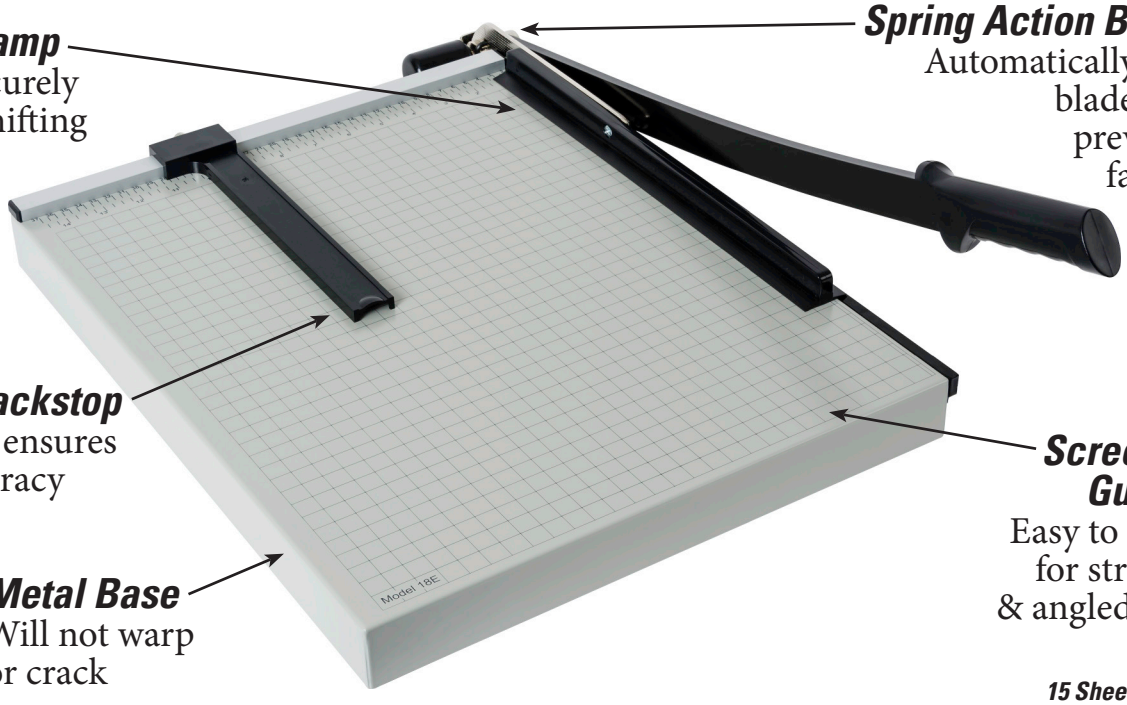

Automatic Clamp
Holds work securely and prevents shifting

Spring Action Blade
Automatically lifts blade and prevents falling

Adjustable Backstop
Saves time and ensures consistent accuracy

Screened Guides
Easy to align for straight & angled cuts

Metal Base
Will not warp or crack

15 Sheet Capacity (up to 15)

1 Year Limited Warranty

Dahle North America, Inc.
49 Vose Farm Road
Peterborough, NH 03458
(800) 995.1379 / www.dahle.com