


**MAYLINE**



Medina Series™  
Curved Desk  
Model No. MND63/72

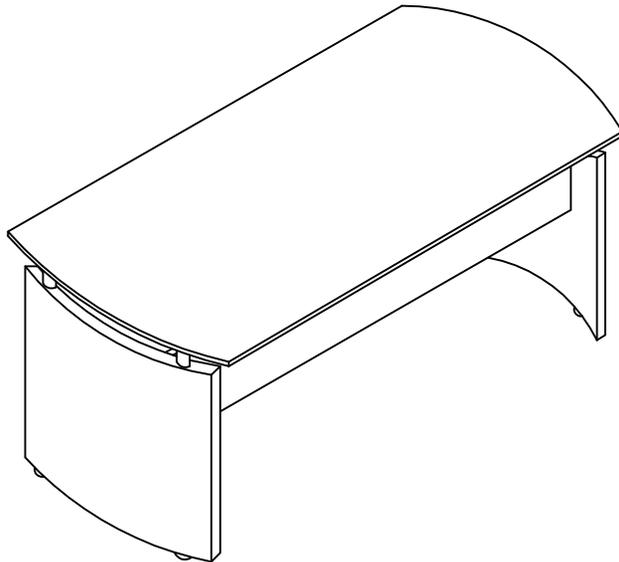

ASSEMBLY INSTRUCTIONS

CALL 1-800-822-8037 FOR ASSISTANCE

# PARTS LIST

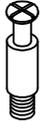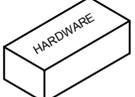Name	Part	Qty.	Spare Qty	Name	Part	Qty.	Spare Qty
<b>A</b>	 <b>REALS001</b> Cam Lock	9	1	<b>D</b>	 <b>REALS102SLV</b> Cam Sticker/Silver	5	1
<b>B</b>	 <b>REALS102**</b> Cam Sticker	4	1	<b>E</b>	 <b>REALS414</b> Base Stand-off	5	
<b>C</b>	 <b>REALS003</b> Cam Post	9	1		 <b>MNCNZHB</b>		



NOTE:

- ①. 1 Top and 1 Modesty Panel packed in one carton - MNDT63/MNDT72.
- ②. 2 Legs with Hardware packed in one carton - MNDB.


Items with HB are in hardware box.

\*\*Denotes Color Code

# PARTS LIST

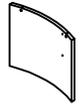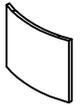Name	Part	Qty.	Name	Part	Qty.
<b>G</b>	 <b>MNDT~~** TOP</b>	<b>1</b>	<b>H2</b>	 <b>MNDB** Right Base Leg</b>	<b>1</b>
<b>H1</b>	 <b>MNDB** Left Base Leg</b>	<b>1</b>	<b>K</b>	 <b>MNDTK~~** Modesty Panel</b>	<b>1</b>

## Pre-Assembled Replacement Part List

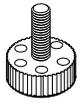Replacement #	Part	Qty.
<b>REALS425</b>	 <b>Leveler</b>	<b>4</b>

~~Denotes Size - 63/72


\*\*Denotes Color Code

**2**

## IMPORTANT!

**Review ALL instructions before beginning assembly.** These instructions are provided to avoid problems that may occur from improper assembly or installation. Mayline and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.


- 1 Insert Cams (A) into the Modesty Panel (K) and Base Legs (H1 & H2). Install Cam Posts (C) into threaded inserts in Base Legs (H1 & H2). Attach Modesty Panel (K) to Base Legs (H1 & H2) by turning Cams (A). Apply Cam Sticker/Silver (D) onto Cams (A) of Modesty Panel (K).

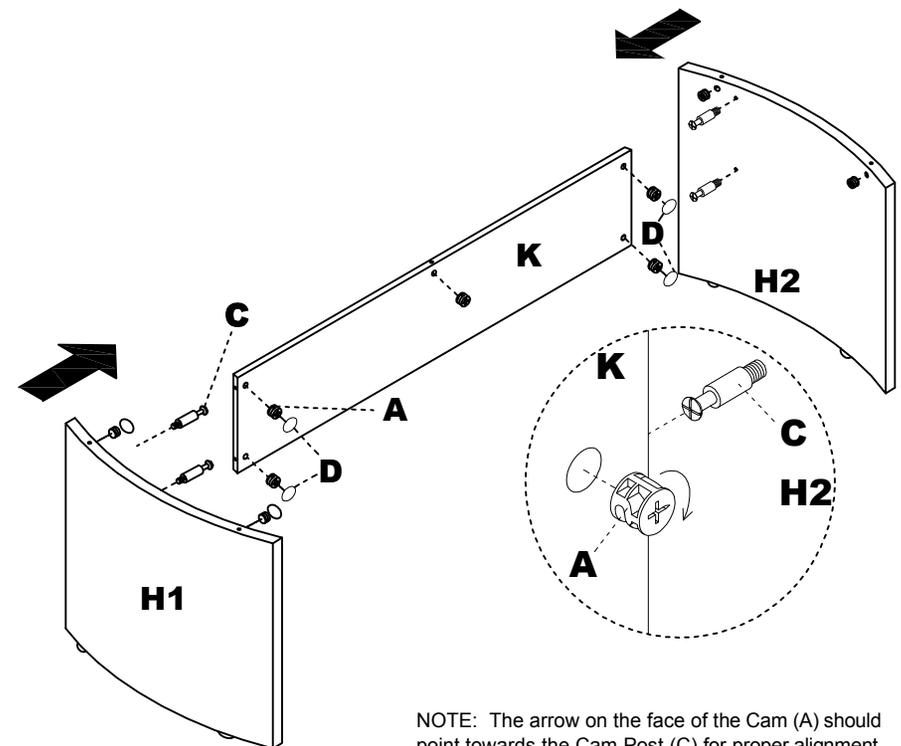


NOTE: The arrow on the face of the Cam (A) should point towards the Cam Post (C) for proper alignment.

**3**


- 2** Install Base Stand-off (E) into threaded inserts in underside of Top (G).

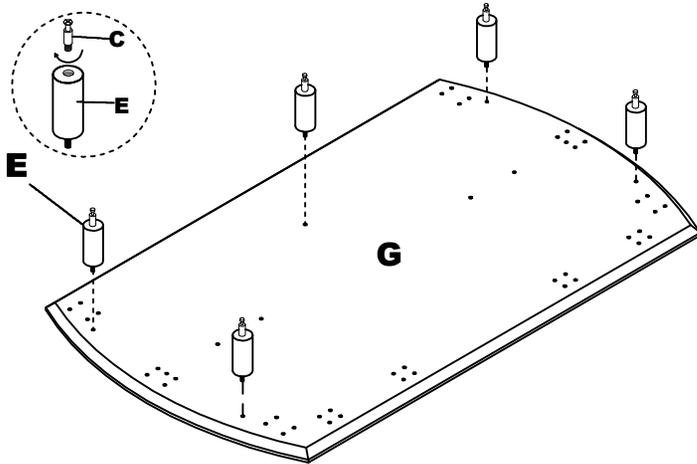

- 3** Place Top (G) onto base and lock in place by turning Cams (A). Apply Cam Stickers (B) onto Cams (A) of Base Legs (H1 & H2). Apply Cam Sticker/Silver (D) onto Cams (A) of Modesty Panel (K).

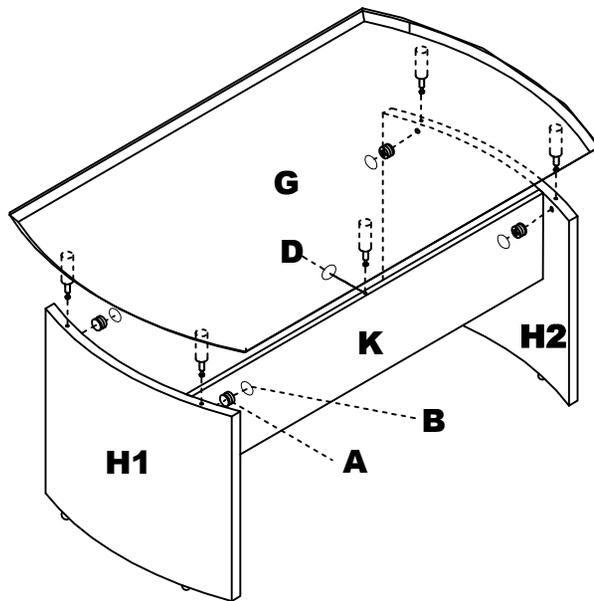


**4**

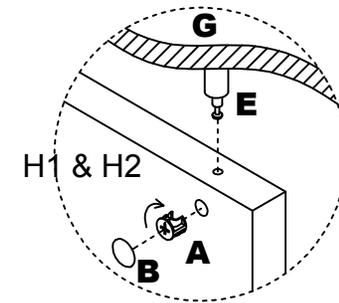

NOTE: The arrow on the face of the Cam (A) should point towards the Base Stand-off (E) for proper alignment.

**ATTENTION:** Due to the floating design of the Medina desk, care must be taken when moving the unit. Lift the desk by its base and avoid pushing the desk

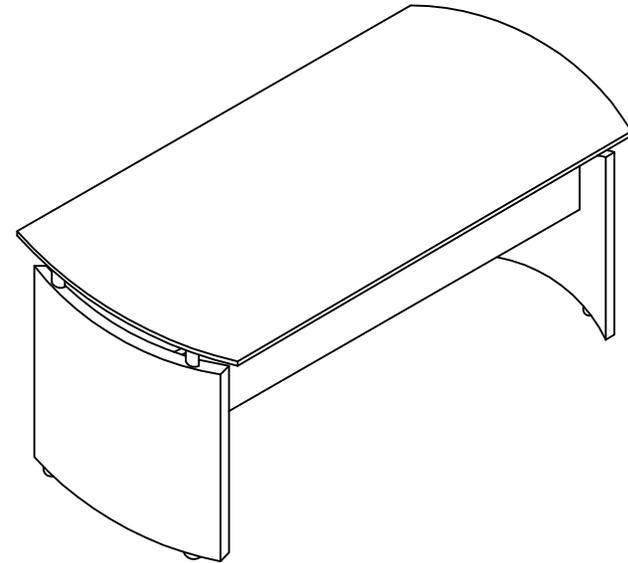

**5**